



GRIDSCAPE™ Shower Screen

**See Material List on Sheet 2

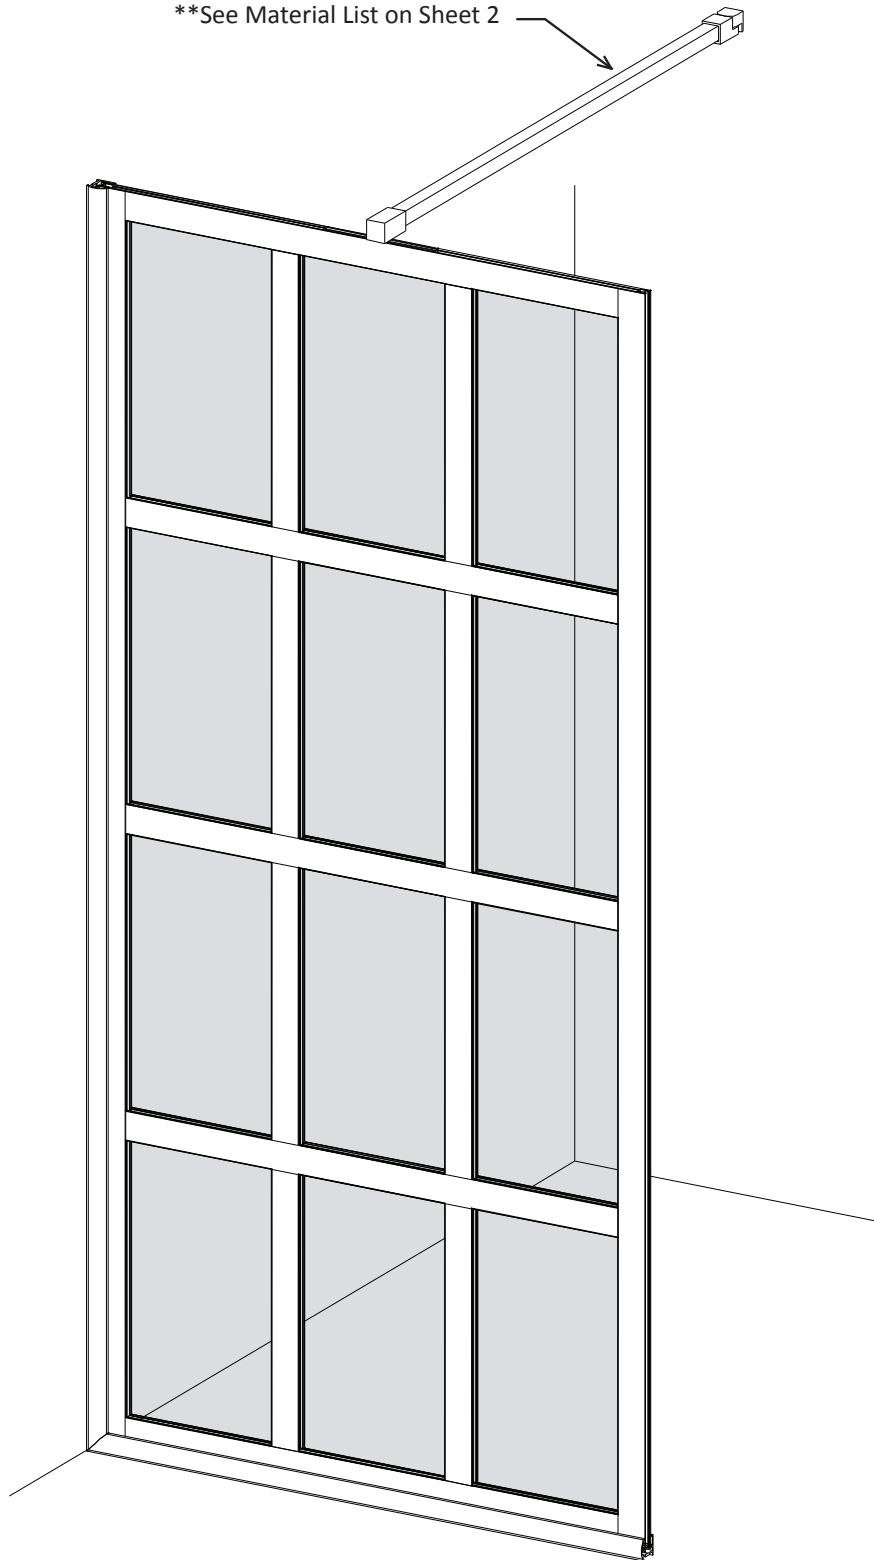

(GS) SHOWER SCREEN 02-09-2016

GRIDSCAPE™ Shower Screen

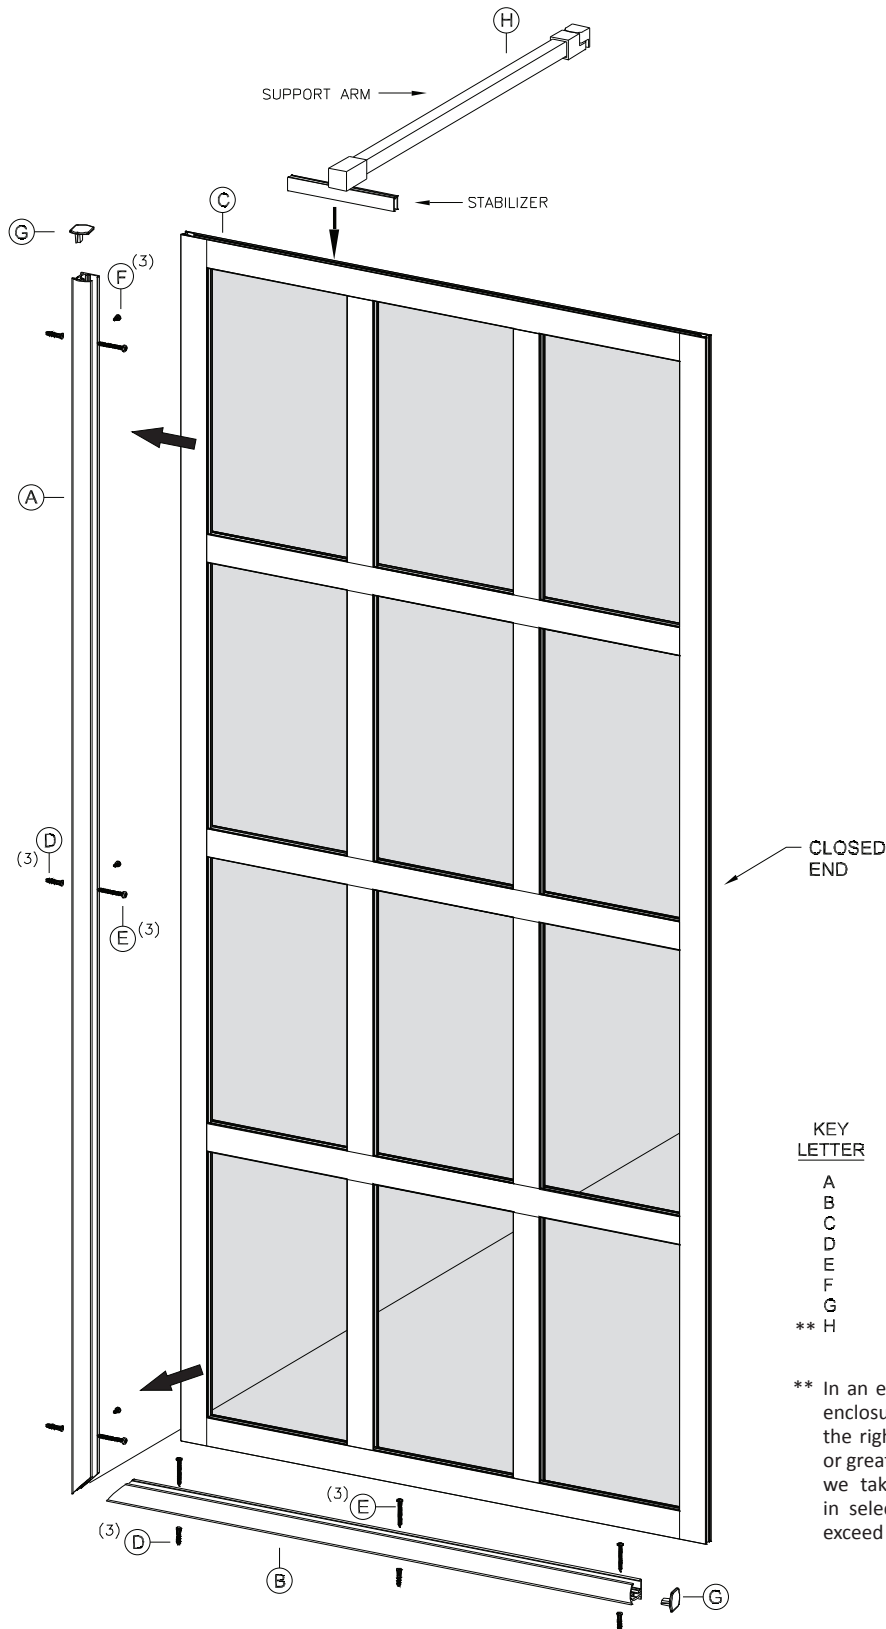


KEY LETTER	PART NUMBER	DESCRIPTION	QTY
A	900	WALL JAMB POST	1
B	900	SILL	1
C	-	PANEL	1
D	1329	PLASTIC SCREW ANCHORS	6
E	6-8114PHP	INSTALLATION SCREWS	6
F	638PHPT	ADJUSTMENT SCREWS	6
G	CP900	END CAP	2
** H	SQ59	SUPPORT BAR ASSEMBLY	1


** In an effort to ensure that your shower enclosure arrives on time, we reserve the right to substitute an item of equal or greater value. In making substitutions, we take great care and consideration in selecting an item that will meet or exceed the substituted item.

(G5) SHOWER SCREEN 02-09-2016

GRIDSCAPE™ Shower Screen

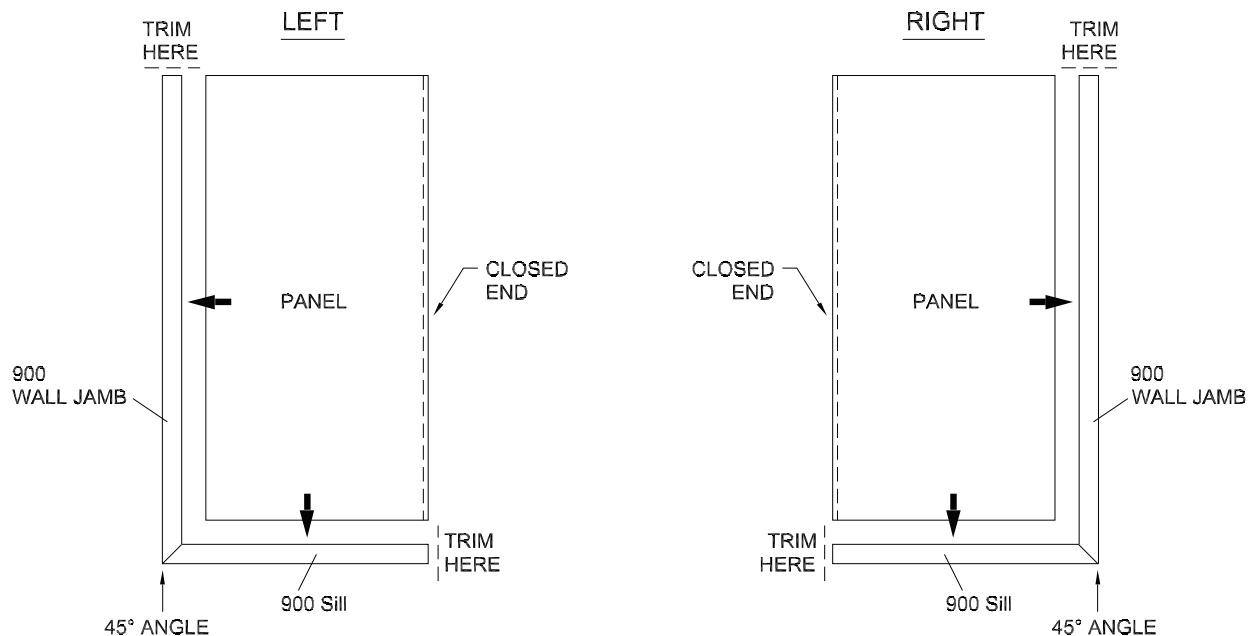

1. According with left / right selection, trim both CST 900 profiles 1/2" longer than Panel height and width.

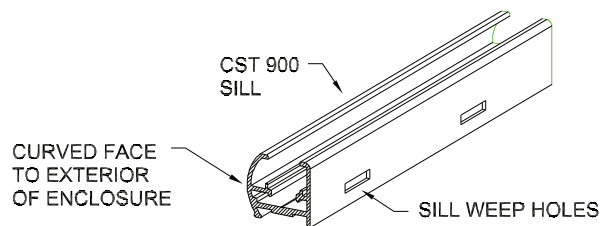

2. Position Sill (B) on center of curb. Using the Sill's pre-drilled holes as guides, mark and drill three 1-1/2" deep installation holes using a 1/8" drill bit. Insert three Plastic Screw Anchors (D) into installation holes, reposition Sill (B) and secure it to curb using three Installation Screws (E).
3. Position Wall Jamb (A) against wall. Align mitered ends, then plumb Wall Jamb. Now using the Sill's pre-drilled holes as guides, mark and drill three 1-1/2" deep installation holes using a 1/8" drill bit. Insert three Plastic Screw Anchors (D) into installation holes, reposition Wall Jamb (A) and secure it to curb using three Installation Screws (E).
4. Place Panel (C) into Sill (B) and into Wall Jamb (A), firmly pushing Panel into Wall Jamb as far as it will go. Secure Panel to Wall Jamb using three Self-drilling Adjustment Screws (F).
5. Install End Caps (G) into exposed ends of Sill (B) and at top of exposed end of Wall Jamb (A).
6. Secure Panel to Wall using Support Arm Assembly (H). Insert Support Arm Stabilizer into top of Panel (C), position other end of Support Arm against back wall, mark its location and secure to wall (see instructions provided with Support Arm Assembly).
7. Finish Installation by caulking outside where unit meets wall and where unit meets curb.

(G5) SHOWER SCREEN 02-09-2016